




Hitchcocks Motorcycles

Rosemary Court, Oldwich Lane West, Chadwick End, Solihull B93 0EY

Web: www.hitchcocksmotorcycles.com Email: info@hitchcocksmotorcycles.com

Tel: 01564 783192

650 Super Meteor Pannier Frames – 93242

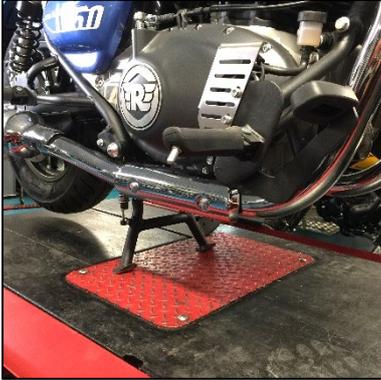

1. Place bike on the centre stand.



4. Insert the shock bolt through the pannier frame and then the lifting handle and loosely reattach to the frame and shock.



7. Insert the M8 x 55mm flange head bolt into the long end of the tubular bracket and loosely attach to the mudguard fastening hole.




2. Loosen and remove rear button head bolt fastening on the mudguard.




5. Loosely attach the lower pannier frame to the frame with the M8 x 20mm bolt and nut from the kit.



8. Repeat the process on the other side.

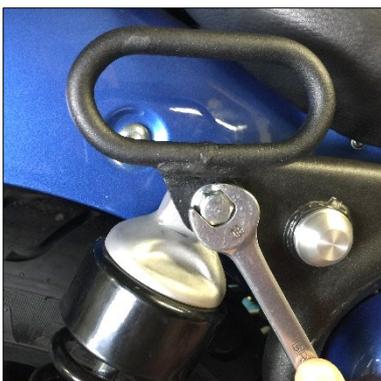

3. Loosen and remove the top shock bolt and lifting handle.

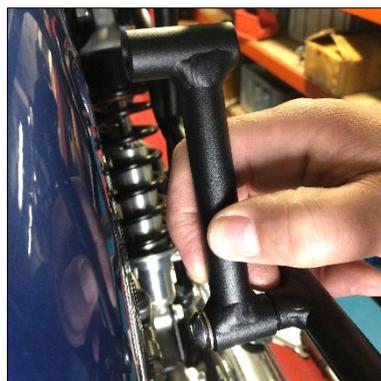

6. Next take the tubular bracket from the kit and loosely attach the shorter end to the pannier lug with the M8 x 35mm button head bolt and washer.



9. Align both frames and tighten. Top shock bolt to 45 N-m
Lower pannier fixings to 25 N-m
Bracket top fixings to 10-15 N-m.
Bracket bottom fixings to 8-12 N-m.