DKdesign
RIDE FOR FREEDOM

BMW INJECTOR GUARDS

BR12038 / INSTALLATION MANUAL



1. The Package Includes :
LEFT **x1** and RIGHT **x1** Guards
M6 x 25 Bolts **x2**
M6 Washers **x2**
8mm Spacers **x2**

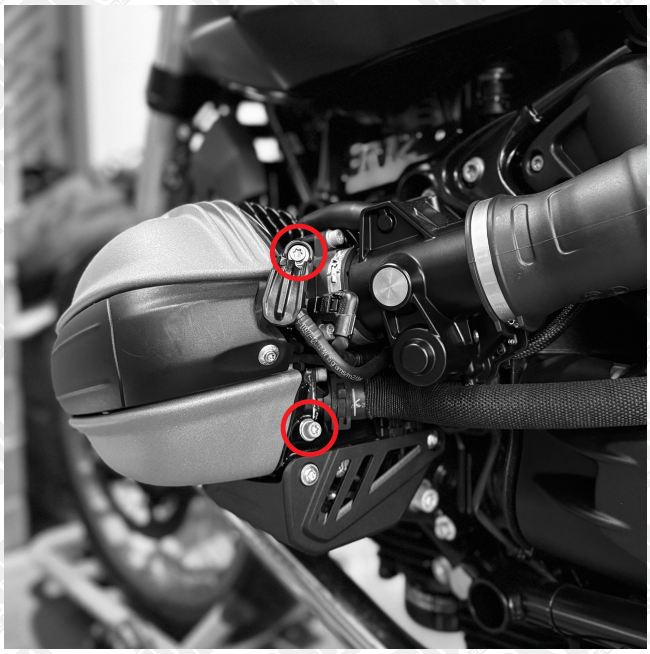

2. Before Installation: Remove the original bolts on both sides of the motorcycle (refer to the ***RED*** circles in the image).
Keep the removed original upper bolts for later use.



3. Upper Mounting Point: Use the supplied M6 x 25 bolt and M6 washer. Insert the bolt through the upper mounting point, then install the supplied 8mm spacer.



4. Lower Mounting Point: Reuse the original upper bolt removed in Step 2, together with the supplied M6 washer, to secure the lower mounting point.

IMPORTANT:
Do not overtighten the bolts. Always ensure that all mounting points are properly secured.

Copyright © 2026 by DKdesign / All Rights Reserved.